

P16 Ex ia Group 1

P16 220 Vac

ENVIRONMENTAL MONITOR



TECHNICAL REFERENCE GUIDE

VOLUME 1.2

FIGURE 1 P16 ENVIRONMENTAL MONITOR

Contents

<i>P16 Ex ia Group 1</i>	<i>1</i>
<i>P16 220 Vac</i>	<i>1</i>
<i>Contents</i>	<i>2</i>
<i>List of figures</i>	<i>3</i>
1. Introduction	4
About this manual	4
About the P16	4
P16 HMI (human machine interface)	5
2. Warranty	7
3. Safety information	7
4. P16 Sensor Description	8
5. P16 Menu	9
About the Menu	9
How to change the settings	9
List of Menu Settings	10
MODE (Default 0)	10
Air Velocity (Default 1.0 M/S)	10
Trip delay (Default 5 Sec)	10
CH4 Methane trip level (Default 1.0%)	10
Trip delay (Default 5 Sec)	10
CO Carbon Monoxide (Default 30 ppm)	11
Trip delay (Default 5 Sec)	11
Power down delay (30 Minutes)	11
RS485 address (Default 5)	11
Baud rate (Default 9600 bps)	11
Parity (default OFF)	11
WS Gain (Default 4.0 M/S)	11
CH4 Gain (Default 1.5%)	11
CO Gain (Default 200ppm)	11
WS 4mA Offset (Factory calibrated)	11
CH4 4mA Offset (Factory calibrated)	11
CO 4mA Offset (Factory calibrated)	11
6. Communication	12
About communication	12

Modbus RTU Protocol	12
Read input registers 30000	13
System Healthy register description 30021	14
If bit reads as a one the sensor is healthy. A Zero indicates that service is required.	14
Example – Read first 5 holding registers	14
Example – Write to holding registers (Only in MODE 211)	15
7. Approvals and Marking	16
8. Electrical specifications	17
9. Terms and conditions	18
Product Agreement	18

List of figures

Figure 1 P16 Environmental Monitor	1
Figure 2 P16 LCD display layout	5
Figure 3 Infra red remote control	6

1. Introduction

About this manual

This manual was prepared to aid the engineer in the configuration, setup and implementation of the P16 with easy to understand terms and procedures.

About the P16

The P16 environmental monitor is the most advanced monitor to date. It is a fully configurable monitor with a highly visible LCD display and RS485 communication for real time monitoring over long distance.

The P16 offers:

- Air velocity measurement
- CO measurement
- CH4 measurement
- Ambient temperature measurement
- RS485 Modbus RTU communication
- Visual Red/Green display
- Relay output
- 3 x 4-20mA outputs

The P16 is manufactured to international standards utilizing the best components available. We offer 24/7 toll free technical support, backup service and training.

P16 HMI (human machine interface)

The P16 operates as a user friendly device with real time data available to the operator. All the data is available on the large LCD and all parameters are adjustable via handheld infra red remote control

All the measurements and data are available to the network via MODBUS RTU RS485.

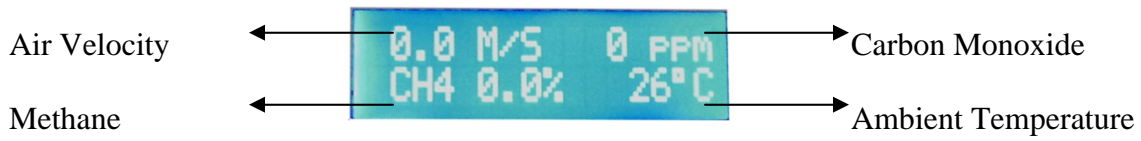


FIGURE 2 P16 LCD DISPLAY LAYOUT

The easy to use handheld infra red remote control is to navigate through the menu and adjust any of the settings.

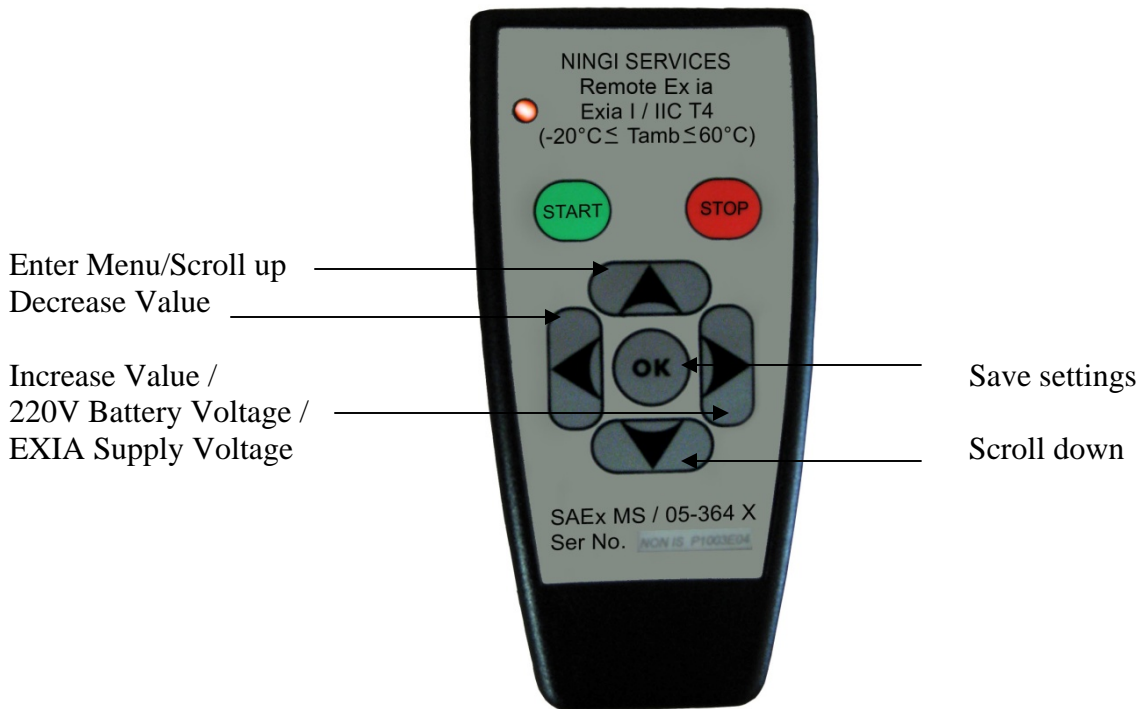


FIGURE 3 INFRA RED REMOTE CONTROL


2. Warranty

The P16 carries a one year limited warranty on all parts and labour

3. Safety information

- ❖ Dangerous voltages can occur on the connectors, even if the auxiliary voltage has been disconnected.
- ❖ Only a certified electrician is allowed to carry out the electrical installation.
- ❖ Breaking the seal on the fixing screws of the device will result in loss of warranty.
- ❖ Electrical safety regulations must always be followed.

4. P16 Sensor Description

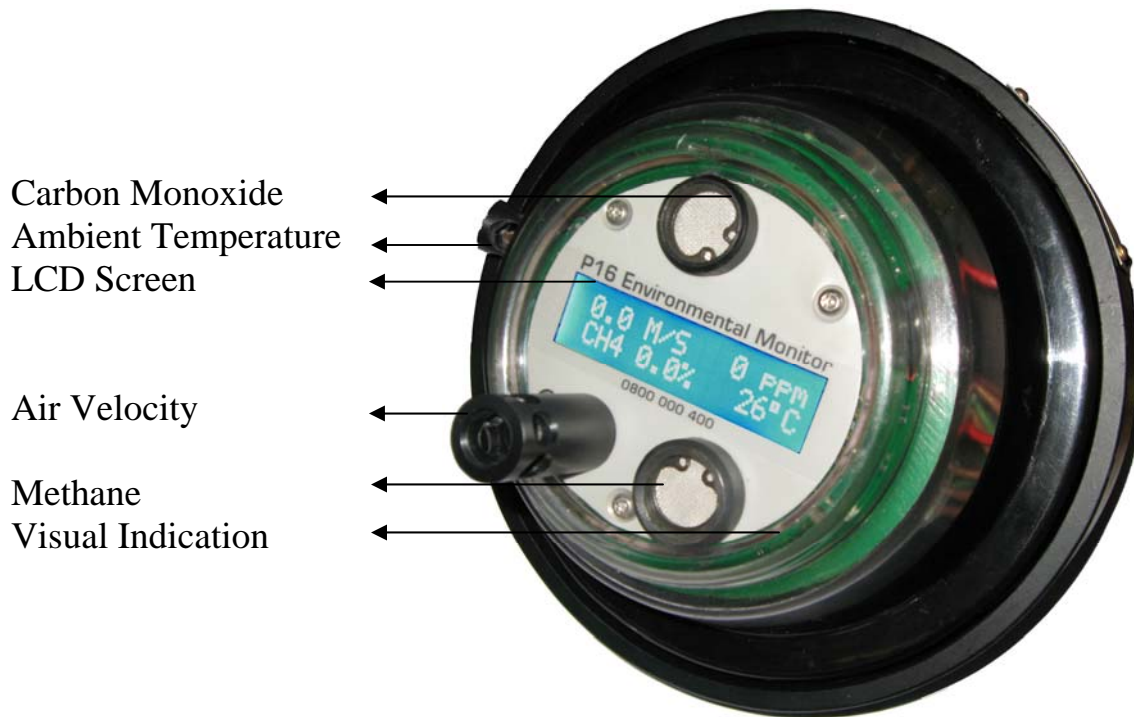






5. P16 Menu



About the Menu

The P16 menu contains all the settings for the trip levels and trip delays as well as the communication settings. The menu settings are located in non volatile memory (settings remain unchanged when powered down). The P16 menu settings can be changed by infra red remote control or network.

Note: To enable setting changes via the RS485 network set MODE to 211.

How to change the settings

Press the  button on the local keypad or infra red remote control to enter the menu. From there press  to scroll up through the menu, press  to scroll down through the menu.  or  will decrease or increase the value for that specific setting.

Press the  button to exit the menu. To save the settings press the  button again within 10 seconds.

List of Menu Settings

SETTING	MIN	MAX	DEFAULT	UNIT
Mode	OFF	255	0	-
Air Velocity	OFF	10.0	1.0	M/S
Trip Delay m/s	OFF	120	5	Sec
Methane CH4	OFF	2.0	1.0	%
Trip delay CH4	OFF	120	5	Sec
Carbon Monoxide CO	OFF	1000	30	ppm
Trip delay CO	OFF	120	5	Sec
Power down delay	OFF	240	30	Min
RS485 Address	OFF	247	5	-
Baud Rate	OFF	19200	9600	bps
Parity	OFF	-	OFF	-
WS 20mA gain	OFF	10.0	4.0	M/S
CH4 20mA gain	OFF	1.5	1.5	%
CO 20mA gain	OFF	1000	200	ppm
4.0mA WS Offset – Advanced menu setting	OFF	50	OFF	-
4.0mA CH4 Offset – Advanced menu setting	OFF	50	OFF	-
4.0mA CO Offset – Advanced menu setting	OFF	50	OFF	-

MODE (Default 0)

This setting will activate different operating modes.

- MODE 4 – Test 4-20mA current loops
- MODE 10 – Enable relay to pulse every 60 seconds if system healthy
- MODE 11 – Disable relay to pulse every 60 seconds if system healthy
- MODE 25 – Clear hour meter 2
- MODE 29 – Enable 4-20mA offset adjustments
- MODE 100 – Display CH4 raw value
- MODE 101 – Display CO raw value
- MODE 102 – Display WS raw value
- MODE 103 – Display Ambient temperature raw value
- MODE 211 – Enable write to settings over RS485 network

Air Velocity (Default 1.0 M/S)

Air velocity trip level

Trip delay (Default 5 Sec)

Trip delay if air velocity is below trip level.

CH4 Methane trip level (Default 1.0%)

CH4 - Methane trip level.

Trip delay (Default 5 Sec)

Trip delay if CH4 is above trip level.

CO Carbon Monoxide (Default 30 ppm)

CO - Carbon Monoxide trip level.

Trip delay (Default 5 Sec)

Trip delay if CO is above trip level.

Power down delay (30 Minutes)

Power down after mains failure to reserve battery power. Only operational in the 220Vac non IS battery backup monitors.

RS485 address (Default 5)

RS485 communication address.

Baud rate (Default 9600 bps)

Baud rate for RS485.

Parity (default OFF)

Parity bit for RS485.

WS Gain (Default 4.0 M/S)

The 4-20mA current loop will output 20mA at this level.

CH4 Gain (Default 1.5%)

The 4-20mA current loop will output 20mA at this level.

CO Gain (Default 200ppm)

The 4-20mA current loop will output 20mA at this level.

WS 4mA Offset (Factory calibrated)

Adjust this setting to output 4mA at zero reading.

CH4 4mA Offset (Factory calibrated)

Adjust this setting to output 4mA at zero reading.

CO 4mA Offset (Factory calibrated)

Adjust this setting to output 4mA at zero reading.

6. Communication

About communication

The P16 offers RS485 (Modbus RTU) communication.

Modbus RTU Protocol

The protocol for Modbus RTU consists of a string of bytes. The string starts with the RS485 address, the function required, addresses, data bytes and ends with CRC (cyclic redundancy check).

Read input registers 30000

The real time voltage and current measurements and other important data are available on the input registers.

Below is a list of the available input registers. Any amount of data may be requested by the Modbus RTU protocol.

REGISTER	NAME	DESCRIPTION
30001	Air Velocity	Air velocity measurement
30002	CH4	CH4 measurement
30003	CO	CO measurement
30004	VDC	Input voltage on P16
30005	Temperature	Ambient temperature
30006	Mode	Operating Mode
30007	WS Trip	Air velocity trip level
30008	WS Delay	Air velocity trip delay
30009	CH4 Tip	CH4 trip level
30010	CH4 Delay	CH4 trip delay
30011	CO Trip	CO trip level
30012	CO Delay	CO trip delay
30013	Power down	Power down delay
30014	Address	RS485 address (Default 5)
30015	Baud rate	Baud rate (Default 9600 bps)
30016	Parity	Parity bit (Default OFF)
30017	ID 4	Left most serial no. digit in HEX
30018	ID 3	2 nd serial no. digit in HEX
30019	ID 2	3 rd serial no. digit in HEX
30020	ID 1	Right most serial no. digit in HEX
30021	System	System healthy register
30022	Communication	Communication healthy register
30023	Co raw	Raw value from CO sensor
30024	Ch4 raw	Raw value from CH4 sensor
30025	Ws raw	Raw value from Air velocity sensor

All input registers are 16 bit in length (high byte and low byte). 4.5 M/S equals 45 decimal and 0x2D hex is send as 0x00Hbyte & 0x2DLbyte.

System Healthy register description 30021

Register 30021 Bitwise *Register Read only*

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Calibration due	RAM	Memory	Led's	Ambient	CO	CH4	WS

If bit reads as a one the sensor is healthy. A Zero indicates that service is required.

Calibration due bit 7– 0 indicates that the sensor needs re-calibration.

RAM bit 6 – 0 indicates Random access memory faulty

Memory bit 5 – 0 indicates Eeprom memory faulty

Led bit 4 – 0 indicates Led driver faulty

Ambient bit 3 – 0 indicates ambient sensor faulty

CO bit 2 – 0 indicates CO sensor and/or circuit faulty

CH4 bit 1 – 0 indicates CH4 sensor and/or circuit faulty

WS bit 0 – 0 indicates Air velocity sensor and/or circuit faulty

Example – Read first 5 holding registers

Example - Slave address = 5

Read request

Slave Address	Function	Start Address Hi	Start Address Lo	No Points Hi	No Points Lo	CRC Lo	CRC Hi
05	03	00	00	00	05	84	4D

Read response

Slave Address	Function	Byte Count	Data Hi	Data Lo]...[Data Hi	Data Lo	CRC Lo	CRC Hi
05	03	0A	XX	XX	XX	XX	XX	XX	XX

Example – Write to holding registers (Only in MODE 211)

Example - Slave address = 5

Write request

Slave Address	Function	Start Address Hi	Start Address Lo	No Registers Hi	No Registers Lo	Byte Count	Data Hi	Data Lo	CRC Lo	CRC Hi
05	10	00	00	00	XX	XX	XX	XX	XX	XX

Write response

Slave Address	Function	Start Address Hi	Start Address Lo	No of Registers Hi	No of Registers Lo	CRC Lo	CRC Hi
05	10	00	00	00	XX	XX	XX

7.Approvals and Marking

SAEx M/03056 X
SANS 60079-0:2000 Part 0
SANS 60079-11:1999 Part II
SABS 549

MARKING ON MAIN UNIT

Manufacturer NINGI Services

Type: P16 Ver 1.1

Serial No's: E 06 0031 to E06 0070 (inclusive) Example

Ex Rating: Ex ia I

IA No: SAEx M/03056 X

$U_i = 15\text{ V}$ $I_i = 2.8\text{ A}$ $C_i = 1.2\mu\text{F}$ $L_i = 0$

Warning: Static Hazard - Wipe only with a damp cloth.

ADDITIONAL MARKING

RS485:

$U_o = 5,88\text{Vdc}$ $U_i = 18\text{V}$

$I_o = 130\text{mA}$

$P_o = 200\text{mW}$ $P_i = 3\text{W}$

$C_o = 100\mu\text{F}$ $C_i = 1,2\mu\text{F}$

$L_o = 20\text{mH}$

Special Conditions of use (X):

- No connections (data lines) may be made to the equipment unless it forms part of a certified system, incorporating the assigned safety parameters.
- A barrier / isolator connected to the RS485 interface shall have a 100mA or lower fuse in place, or P_o (Power Out) of the barrier / isolator shall not exceed 1,2W.
- The programming connector may only be used outside the hazardous location, with no connected circuits into the hazardous location.

8. Electrical specifications

	Min	Typical	Max	Unit
Control voltage P16 Ex ia	8	12	15	VDC
Control voltage P16 220Vac	85	240	275	VAC
Operating current		250	300	mA
Ci		1.2		uF
Power consumption P16 Ex ia		2	3	W
Power consumption P16 220 Vac		2	3	W
Relay contacts P16 Ex ia	5		15	VDC
Relay contacts P16 220 Vac	5		440	Vac
Air velocity measurement	0.2		5.0	M/S
CH4 measurement	0.5		5.0	%
CO measurement	30		1000	ppm
Temperature measurement	0		100	°C
Enclosure protection		IP20		
RS485 Uo			5.88	Vdc
RS485 Io			130	mA
RS485 Po			200	mW
RS485 Co			100	uF
RS485 Lo			20	mH
RS485 Ui			18	V
RS485 Pi			3	W
RS485 C1			1.2	uF
Communication channel RS485 (MODBUS RTU)	600		19200	Bps

9. Terms and conditions

Product Agreement

PTYTRADE384 (PTY) LTD reserves the right to make changes without further notice to any products herein.

The use of the P16 indicates your understanding and acceptance of the following terms and conditions. This agreement shall supersede any verbal or prior verbal or written, statement or agreement to the contrary. If you do not understand or accept these terms, or your local regulations prohibit "after sale" product agreements or limited disclaimers, you must cease and desist using this product immediately.

This product is © Copyright 1998-2005 by PTYTRADE384 (PTY) LTD, all rights reserved. International copyright laws, international treaties and all other applicable national or international laws protect this product. This product and documentation may not, in whole or in part, be copied, translated, or reduced to any electronic medium or machine readable form, without prior consent in writing, from PTYTRADE384 (PTY) LTD and according to all applicable laws.

The sole owners of this product are PTYTRADE384 (PTY) LTD and NINGI SERVICES

LIABILITY DISCLAIMER

PTYTRADE384 (PTY) LTD makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does PTYTRADE384 (PTY) LTD assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in the data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typical" must be validated for each customer application by customer's technical experts. PTYTRADE384 (PTY) LTD does not convey any license under its patent rights nor the rights of others.

PTYTRADE384(PTY) LTD products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the PTYTRADE384 (PTY) LTD product could create a situation where personal injury or death may occur. Should the customer use PTYTRADE384 (PTY) LTD products for any such unintended or unauthorized application, the customer shall indemnify and hold PTYTRADE384 (PTY) LTD and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that PTYTRADE384 (PTY) LTD was negligent regarding the design or manufacture of the part. P16 is a registered trademark of PTYTRADE384 (PTY) LTD. PTYTRADE384 (PTY) LTD does not assume liability for the use of this product beyond the original purchase price of the product.

RESTRICTIONS

You may not use, copy or modify any documentation as expressly defined in this agreement. You may not attempt to unlock or bypass any authentication algorithm utilized by the product. You may not remove or modify any copyright notice or the method by which it may be invoked.

OTHER RIGHTS AND RESTRICTIONS

All other rights and restrictions not specifically granted in this agreement are reserved by PTYTRADE384 (PTY) LTD.